


**Notes:**

**Best Location**

1. Choose a wall that does not have wiring or plumbing behind the drywall.
2. Use a stud finder to locate the edges of the 2x4's.
3. The distance between the 2 inner edges of the 2x4's should be approximately 14½ ".
4. The hole size to cut in the wall will be 50 ½ " x 14 ½ ".
5. Make sure the bottom line is above the baseboard a minimum of 1 ½".
6. Use a drywall saw to cut out the drywall. Remove the cutout portion of the drywall from the wall.

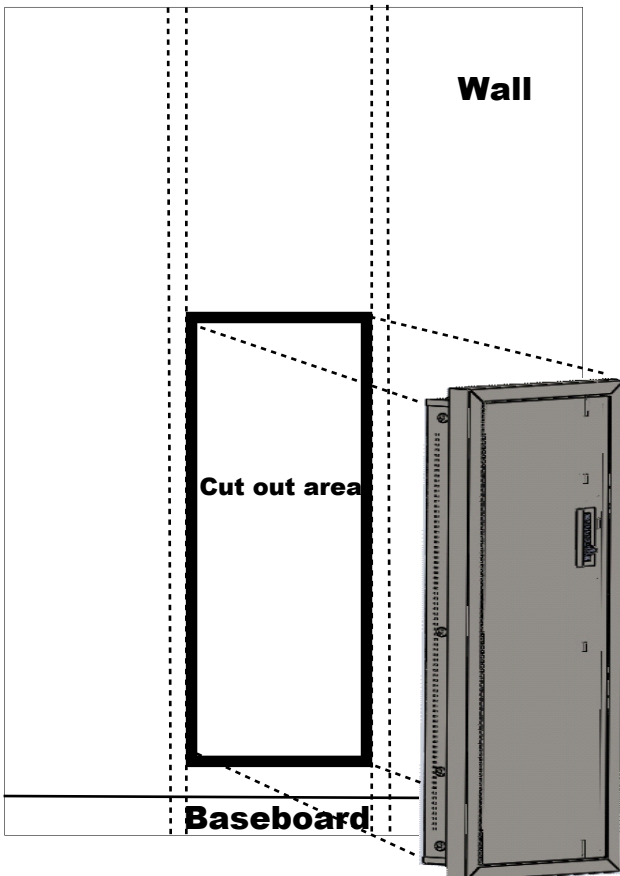

**Installation:**


1. After the install hole has been cut and all the excess drywall removed, insert the Closet Vault II into the cavity.
2. Open the door and drill 4 pilot holes into the 2x4's using any of the 8 predrilled holes as a guide on inside sides of the CVII using a 7/32" drill bit to accommodate the 4 supplied 1/4" lag bolts.
3. Secure the CV II by screwing in the lag bolts with a socket and a ratchet.
4. The CV II is now in place and should be flush and straight in the wall.
5. Next reprogram the lock with the directions on the reverse side of this instruction sheet.

To access your lock for setting a new code simply pull off the lock cover. The lock cover is attached with two strips of Velcro. After the code has been changed carefully reattach the cover.

Pull lock cover off to access lock "L-Tab"

Velcro

L-Tab

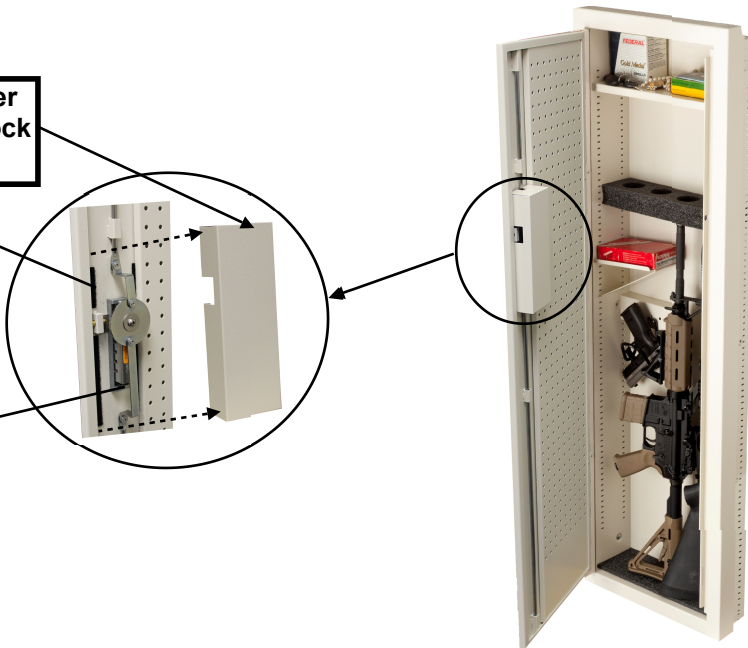

### Optional Accessories



Full Shelf  
51653-FS




Half Shelf  
51653-HS



Gun Caddy  
51653-GC



Pistol Rack  
51653-PR

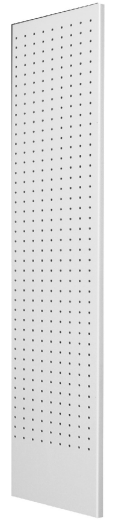

Peg Board  
51653-PB

## OPERATING YOUR SIMPLEX® PUSHBUTTON LOCK

**To open** your push button lock with the factory setting (2&4 then 3):

- STEP 1.** Turn the knob to the left about ¼ turn and release.
- STEP 2.** Push the #2 and the #4 buttons together,
- STEP 3.** Push the #3 button,
- STEP 4.** Turn the knob right (clockwise) a ¼ turn to open.

**To lock:** Close the lid or door, turn the knob left (counter clockwise) a ¼ turn or less until it stops.

**Important:** Always turn the knob to the left before attempting to open lock. Please note, the knob has a clutch feature, meaning, it will cycle a ¼ turn, if, excessive force is used without the proper combination.

**WARNING: The lock does not operate automatically: Close lid or door, turn knob left in order to lock the Closet Vault II.**

**To change your combination:** You may easily change to a new combination using one, all five, or any one of five buttons. Simple two and three button combinations are easy to remember and still provide security. **Note: A combination can include any one of five buttons in any order.** Two or more unique buttons may be pushed at one time as part of a combination. **Do Not use the same number more than once. Record your new combination and store it in a safe place.**

**STEP 1.** Open the door or lid with the factory code or existing combination. Turn the knob to the left and release with the door open.

**STEP 2.** Enter existing combination, but **DO NOT TURN KNOB.**

**STEP 3.** Locate and push the "L" Tab in and release.


**STEP 4.** Turn the knob about ¼ turn left (counter clockwise).

**STEP 5.** Enter new combination (see above for details).

**STEP 6.** Turn the knob to the right about ¼ turn (clockwise).

**STEP 7.** Turn the knob about ¼ turn left. Your new combination is now installed.

**STEP 8. CHECK THE NEW COMBINATION SEVERAL TIMES WITH THE DOOR OPEN BEFORE LOCKING THE DOOR.**

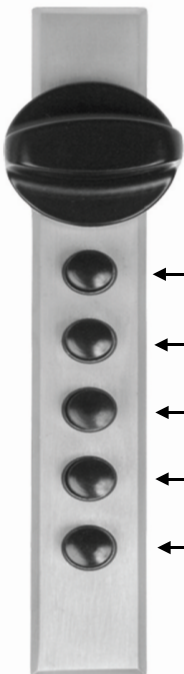

- ← 1
- ← 2
- ← 3
- ← 4
- ← 5